

## Cleaning a Water-mat Print Coater

1. Turn off the power switch
2. Place the drain tube into the Water-mat container and open the control clamp.



3. Place the roller assembly on the bottom hanging pin. Loosen the scraper bar and the red knobs in front of the assembly.



4. Wipe off the scraper bar, pushing excess lacquer into the holding tray.




5. Wipe off the edge of the scraper blade.



6. Place roller assembly into a tank of water or a sink with running water and lightly scrub the rollers with lukewarm water until all the liquid coating is off the roller assembly. Repeat the procedure with the holding tank when it is fully drained.



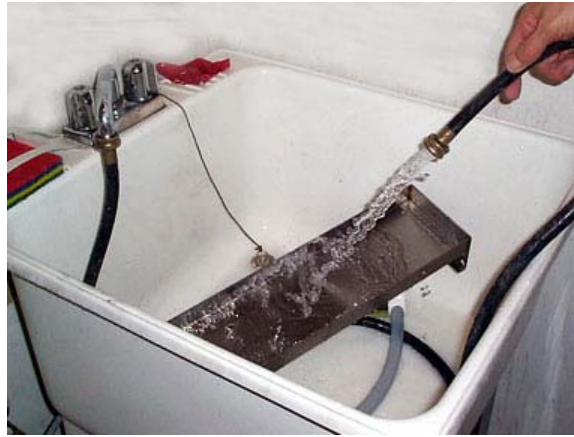

7. If time does not permit a thorough cleaning, submerge the roller assembly and holding tray into a tank of water until they can be thoroughly cleaned.