


Measuring Viscosity of Water-mat

1. Make sure that the Zion 2 viscosity cup is clean and free of debris.



2. Fill the cup full with Water-mat liquid at room temperature.

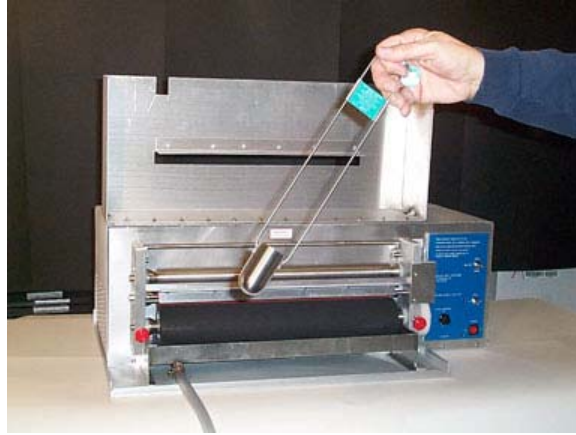

3. Count how many seconds it takes to drain the cup.



4. Stop counting when a gap is observed in the flow of liquid from the bottom of the cup.



5. The amount of seconds elapsed to drain the cup equals the viscosity of the Water-mat.
6. Consult the viscosity recommendation on the Water-mat label.



7. If the viscosity reading exceeds the recommended viscosity of the product add Water-mat Replenisher until the desired reading is achieved.